

**auto  
motor  
and sport**

**FALLER** 

INSTRUCTION  
**4005**

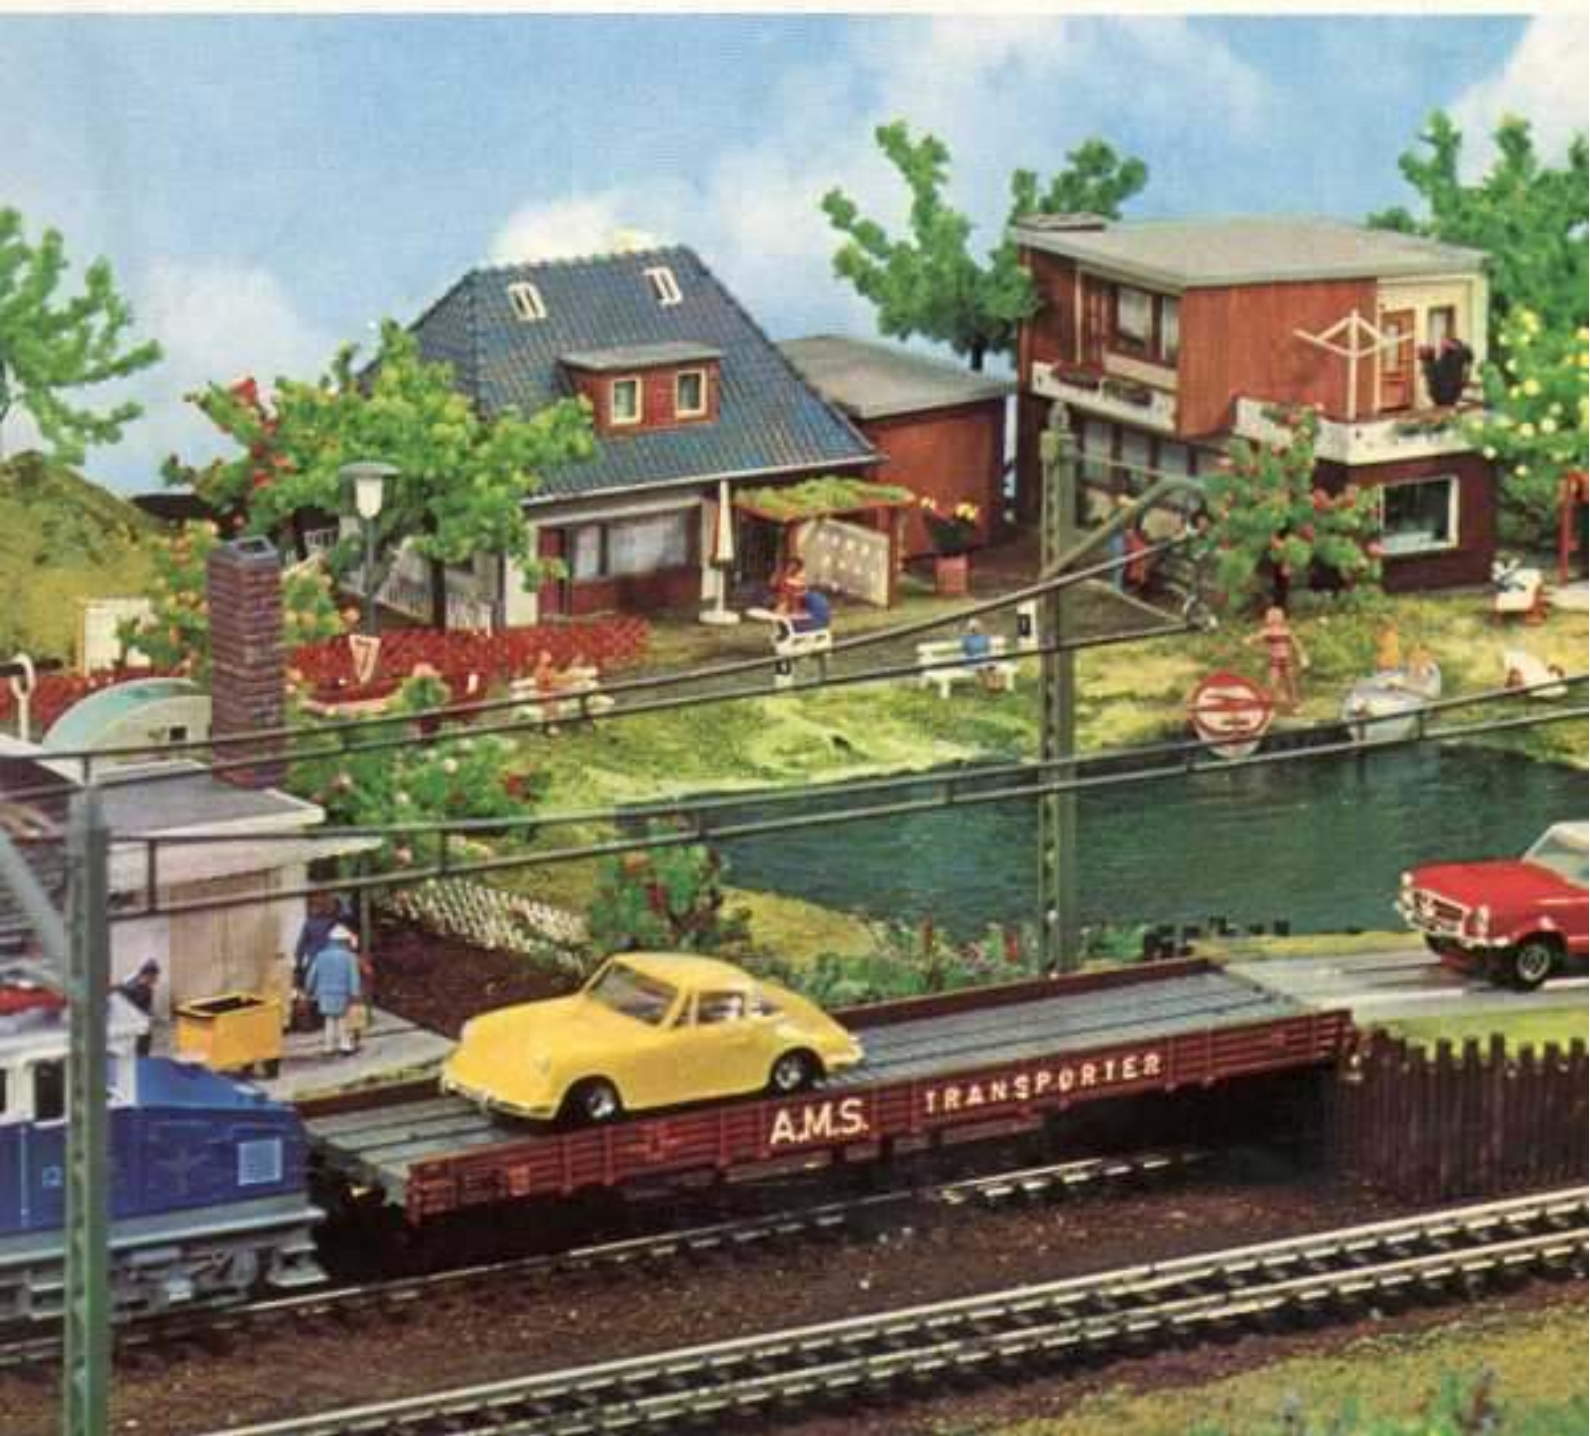






Fig. 1



Fig. 2

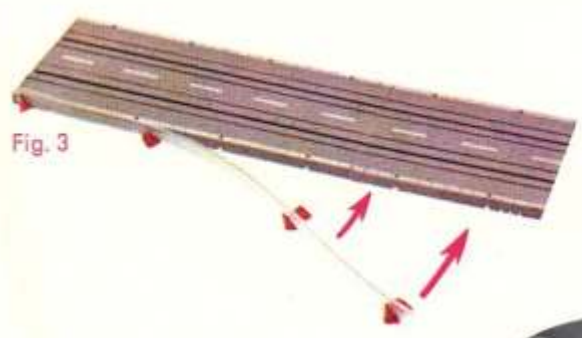


Fig. 3



Fig. 4

12-16 V~



Fig. 5

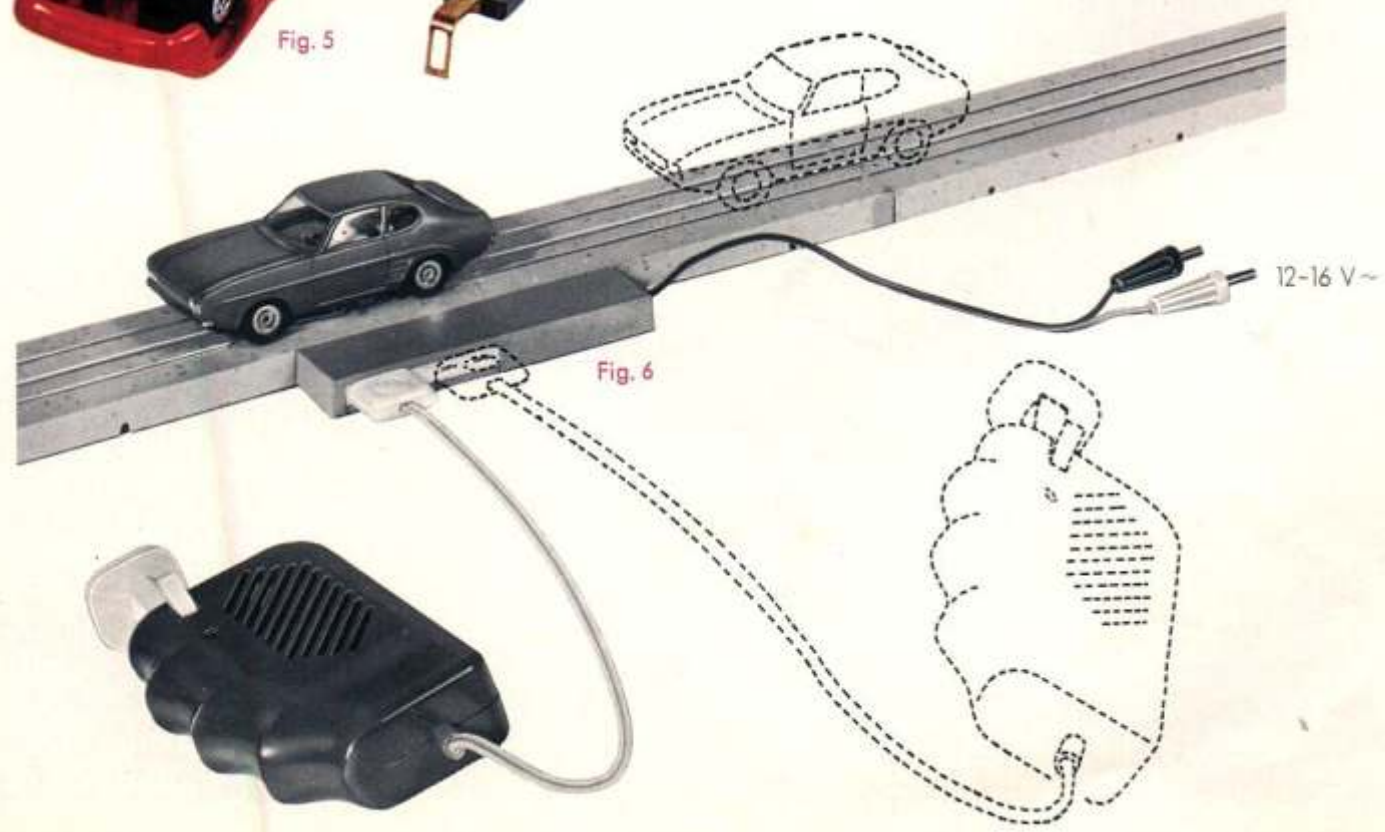


Fig. 6

12-16 V~

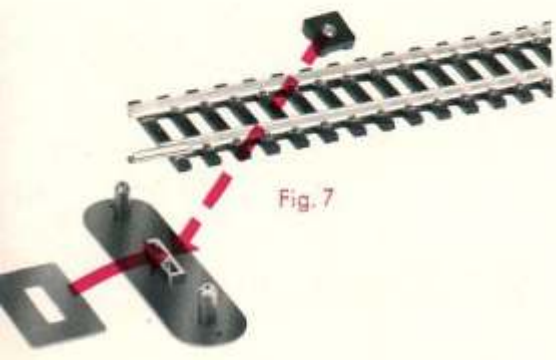


Fig. 7

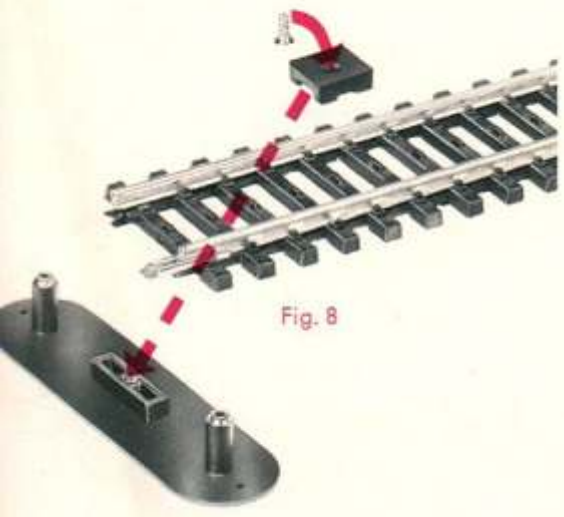


Fig. 8

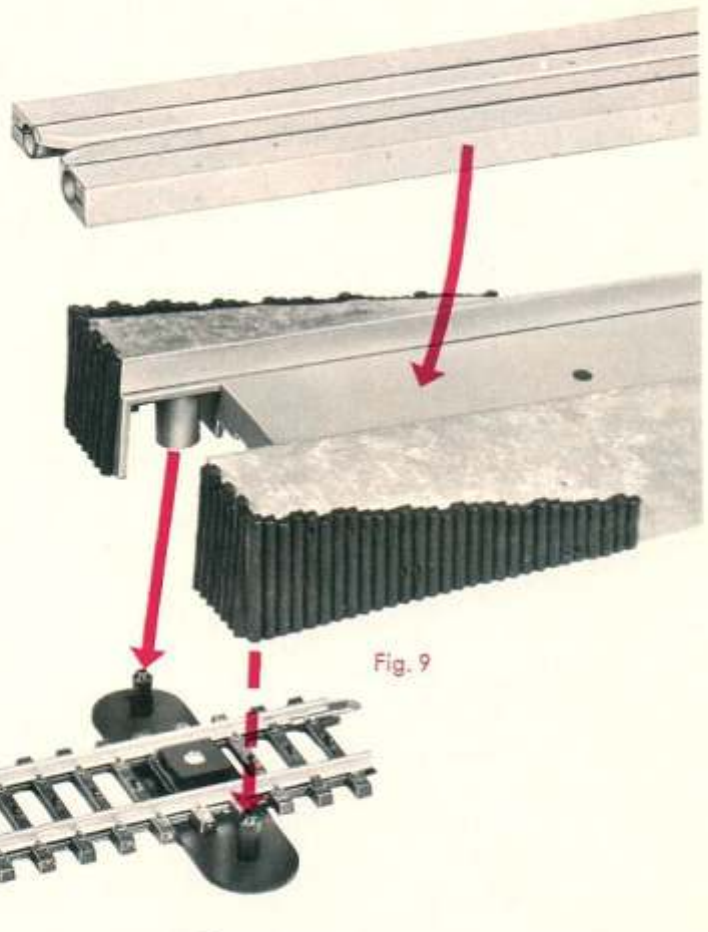


Fig. 9

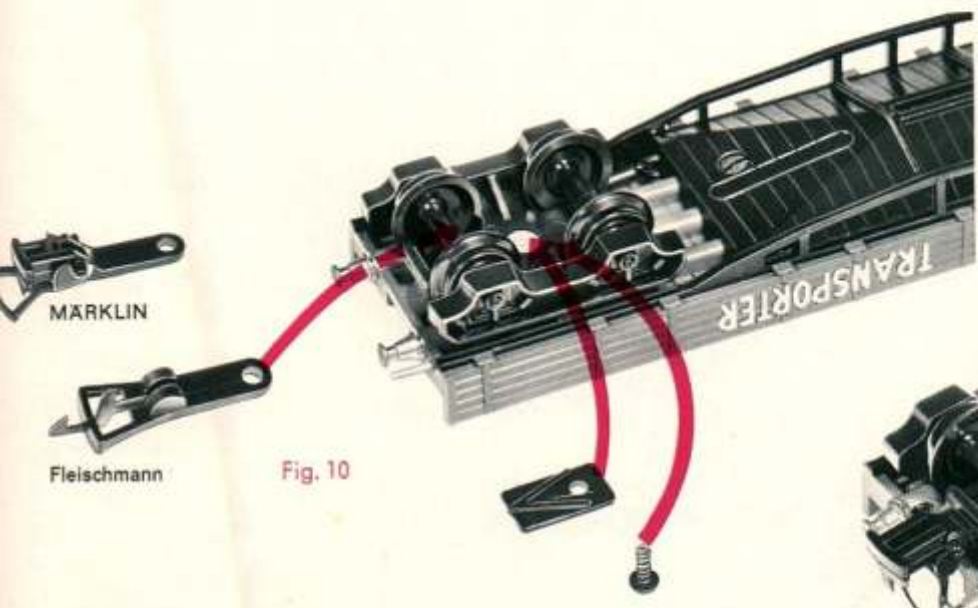


Fig. 10

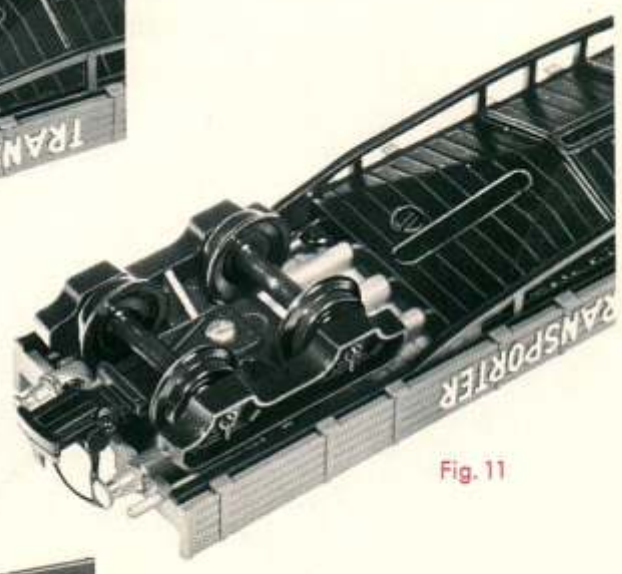


Fig. 11

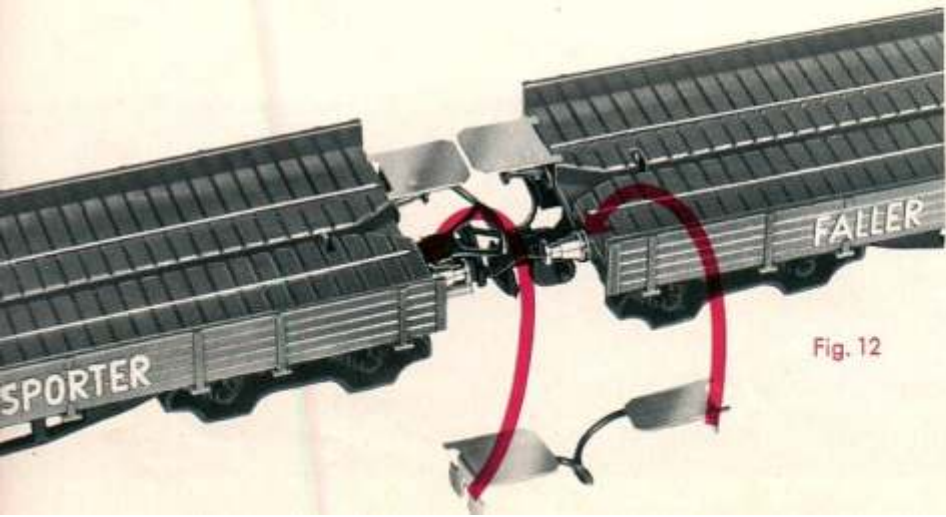


Fig. 12





Fig. 13


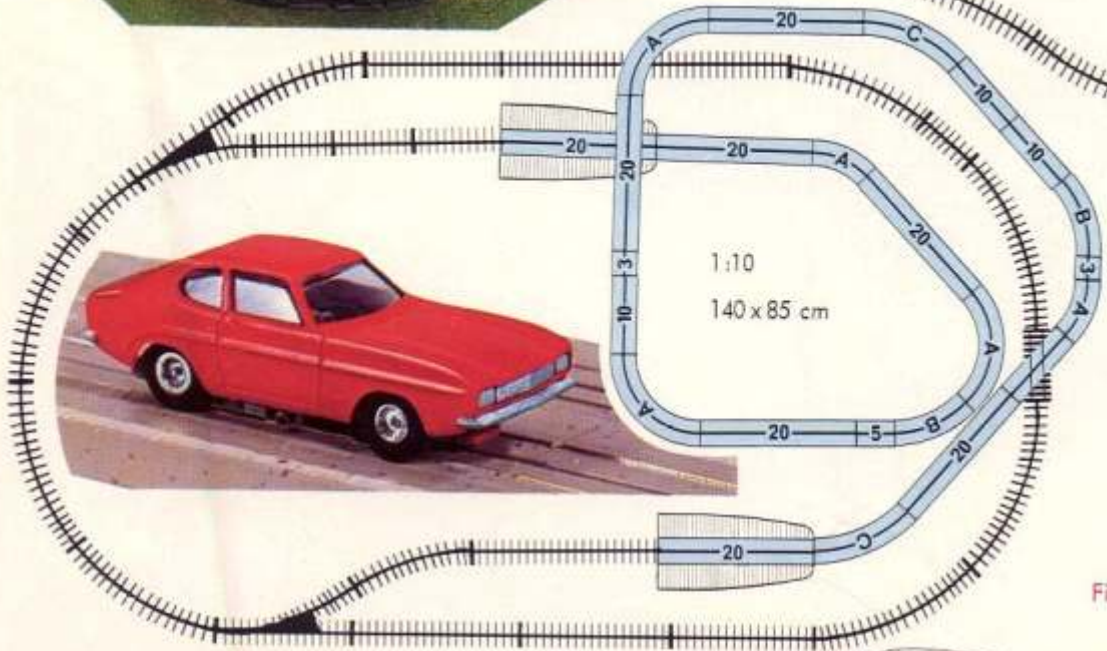


Fig. 14



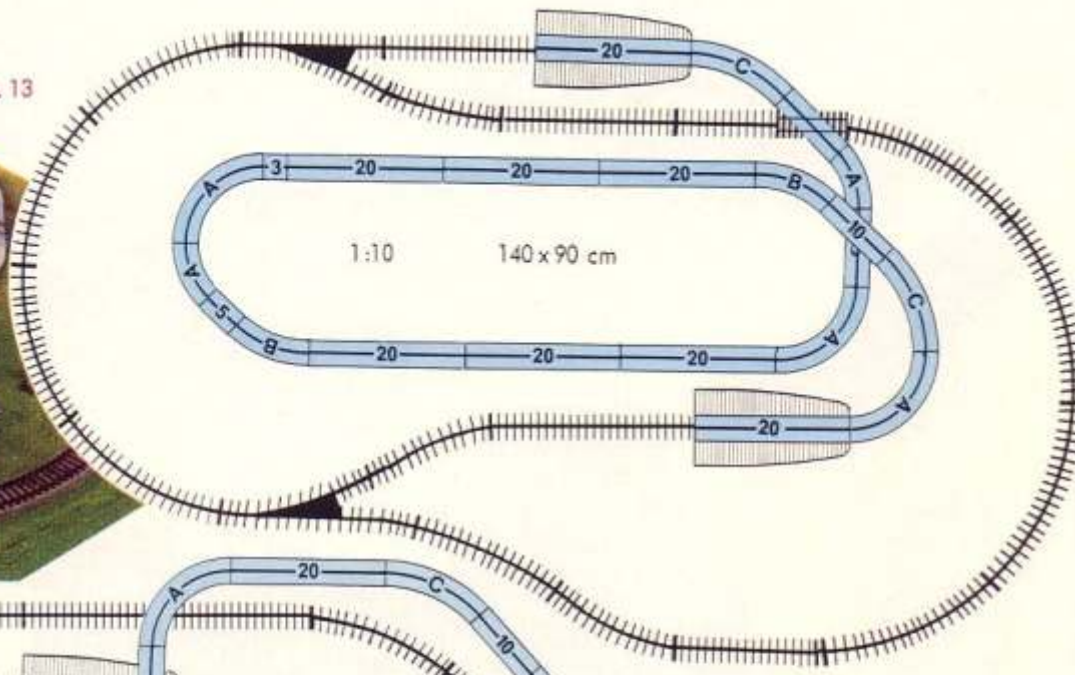

**4005 +**  
 1 x 4556  
 1 x 4558

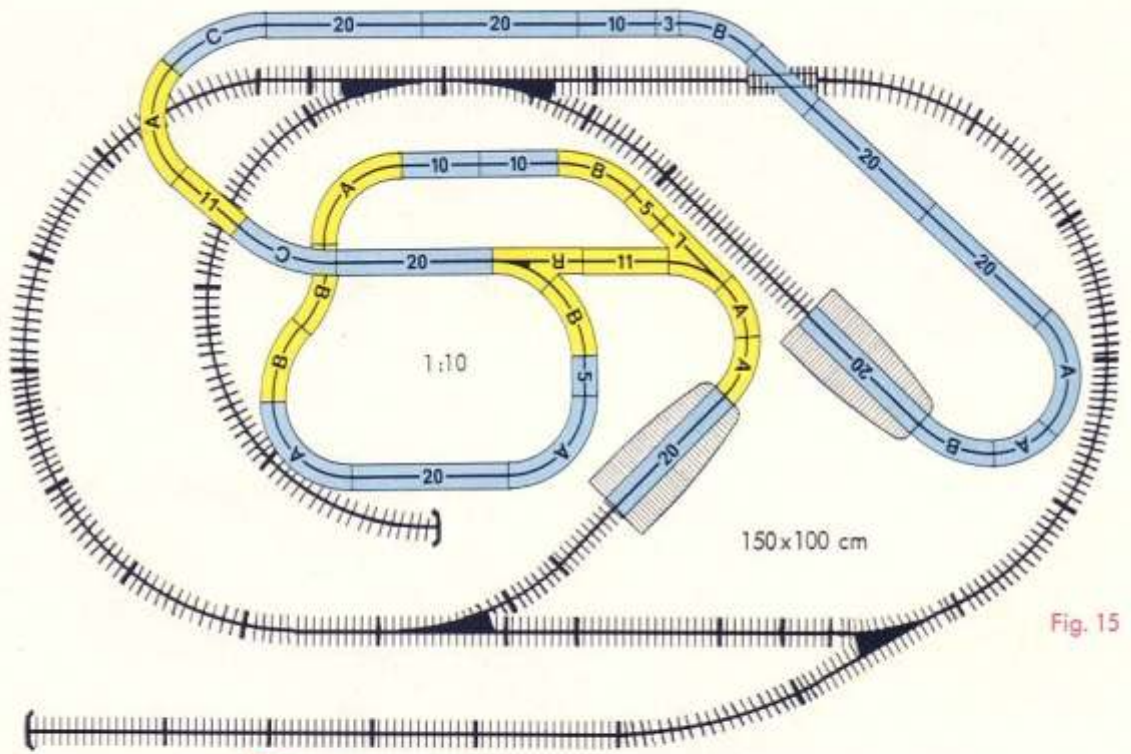


Fig. 15



**4005 +**  
 1 x 4556  
 1 x 4557  
 2 x 4558

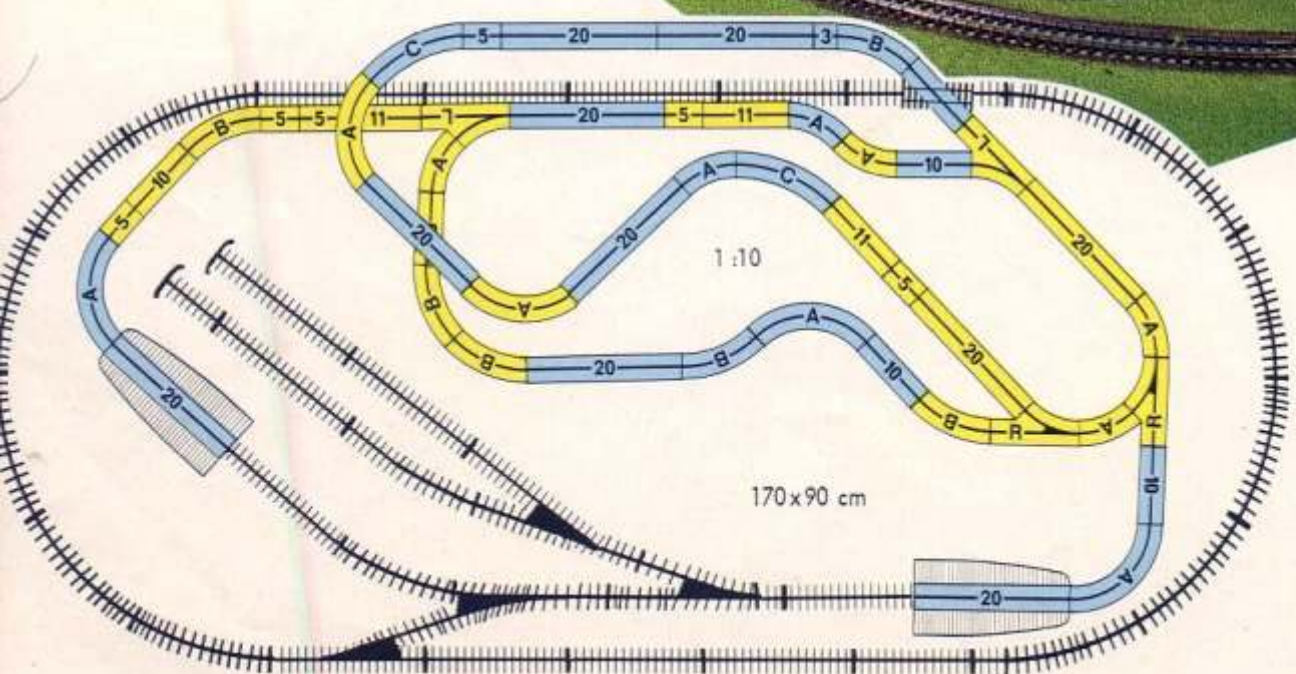


Fig. 16





4005 +  
4003  
1 x 4245  
2 x 4710



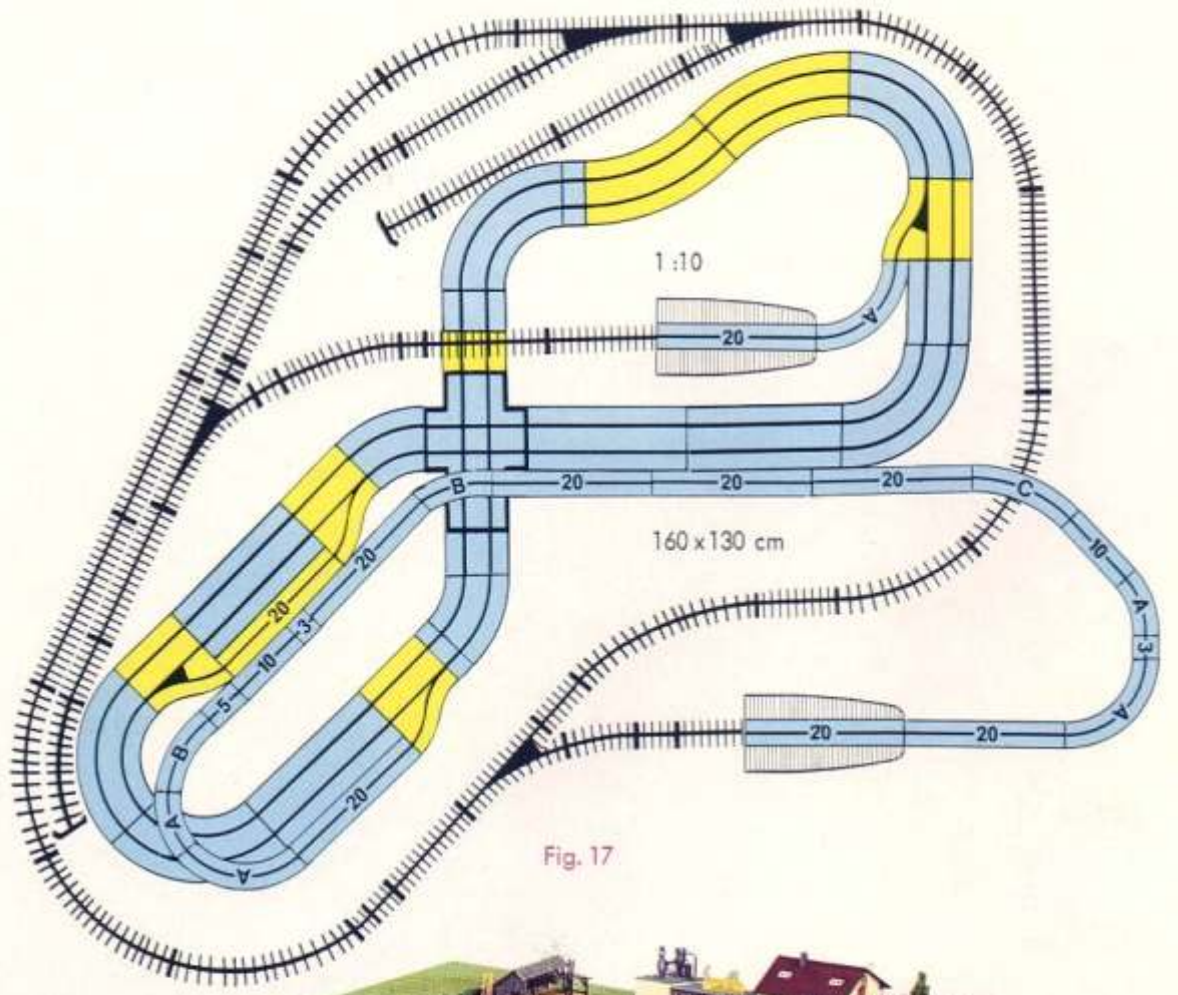


Fig. 17



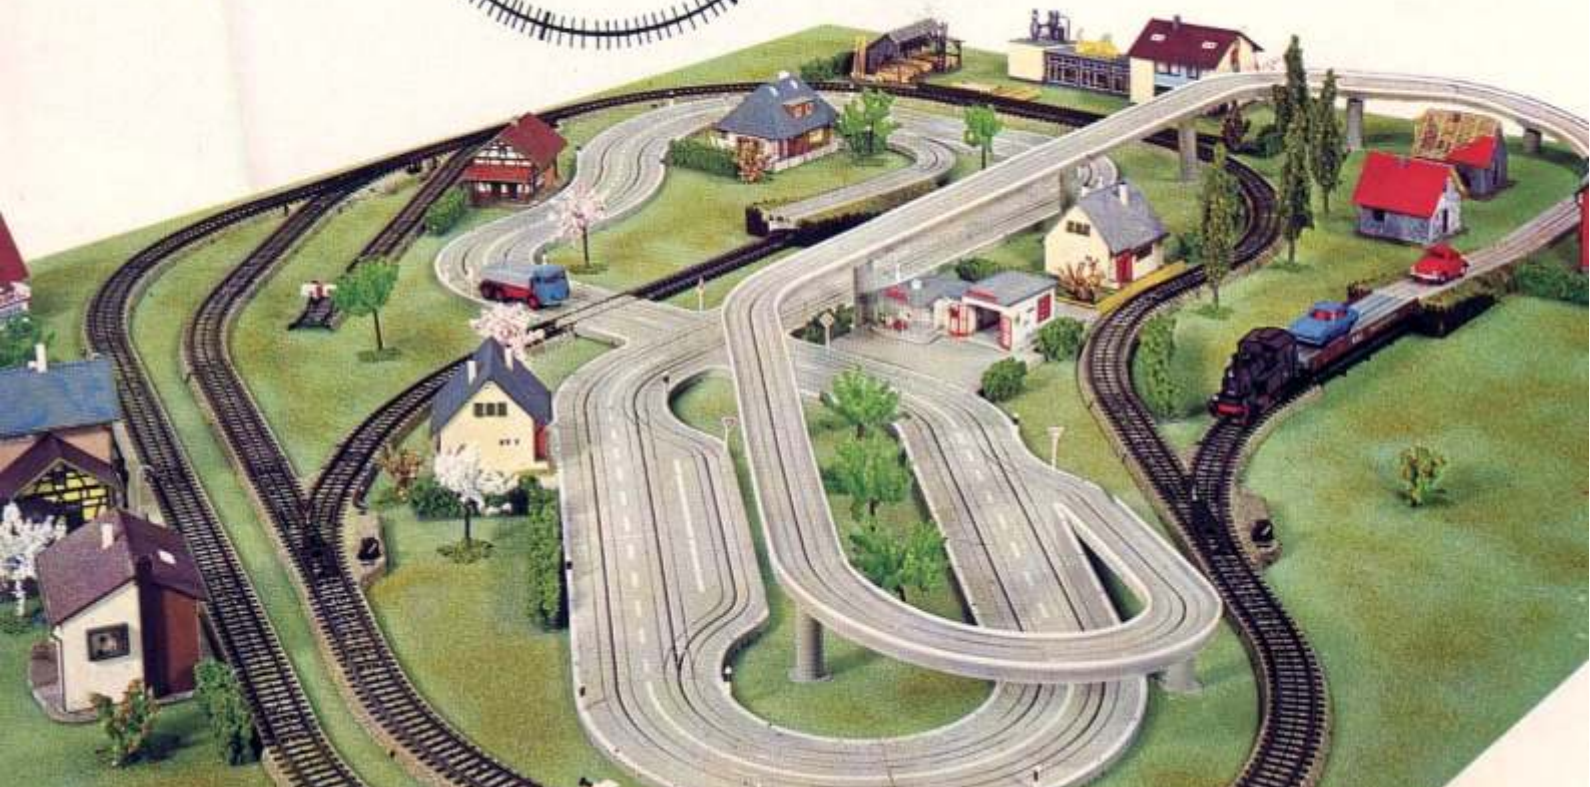

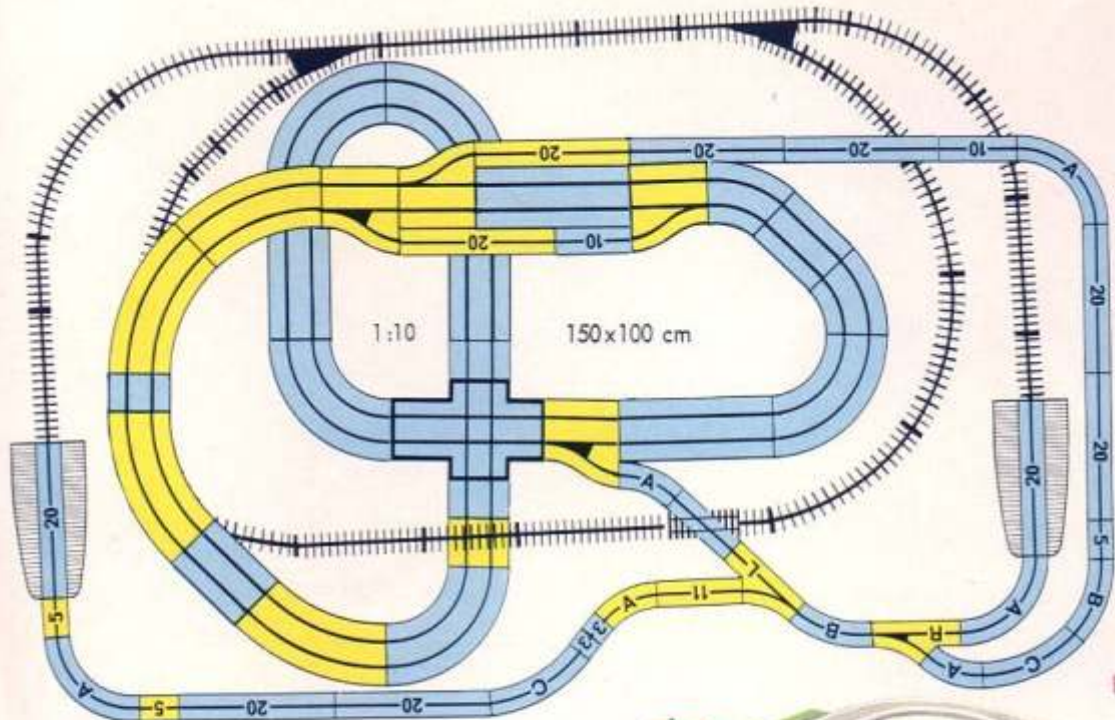

- 4005 +
- 4003 +
- 2 x 4245
- 1 x 4558
- 2 x 4710
- 1 x 4731

Fig. 18



- 4005 +
- 4003
- 2 x 4245
- 1 x 4556
- 1 x 4558
- 2 x 4710
- 1 x 4731


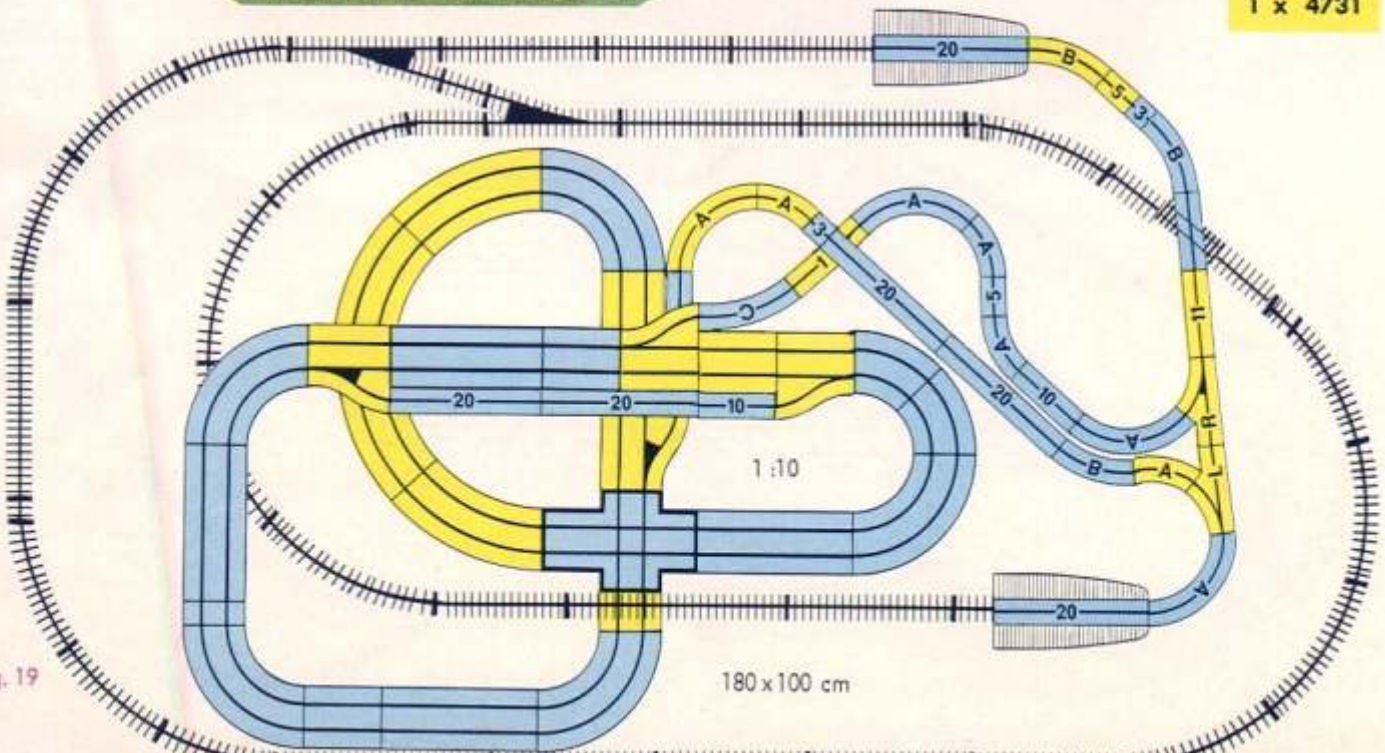


Fig. 19



180x100 cm



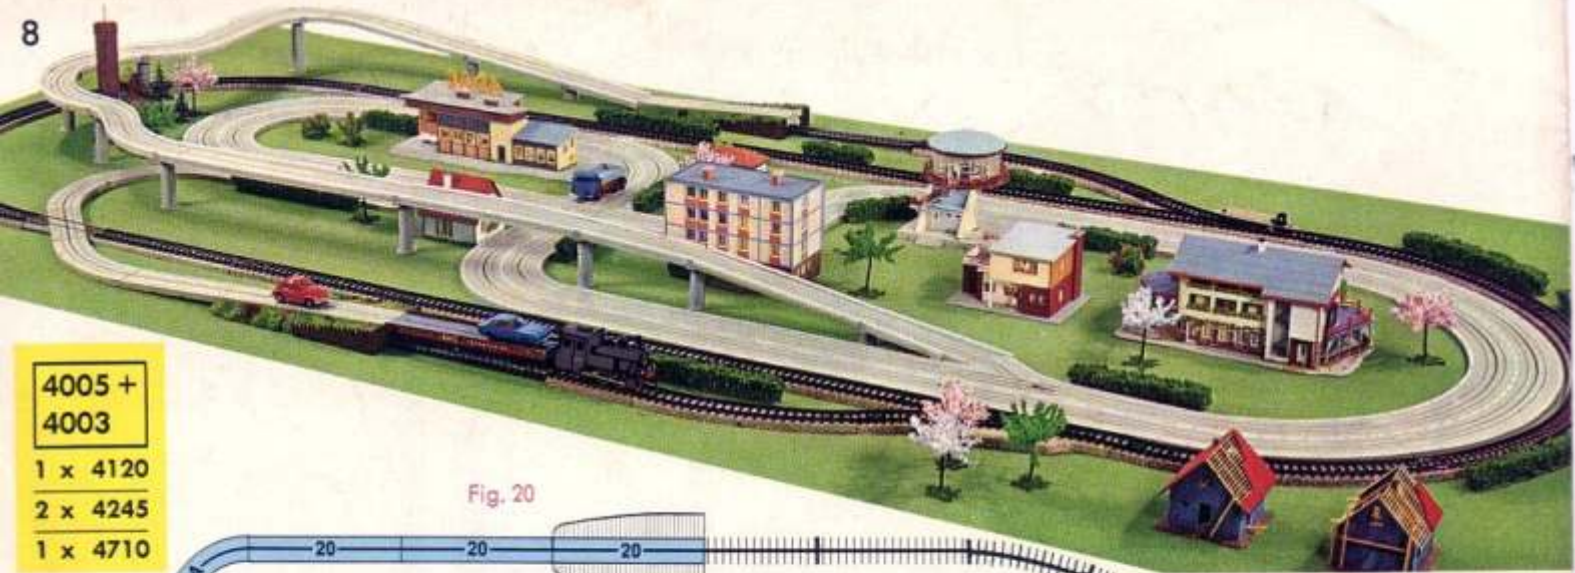

- 4005 +
- 4003
- 1 x 4120
- 2 x 4245
- 1 x 4710

Fig. 20

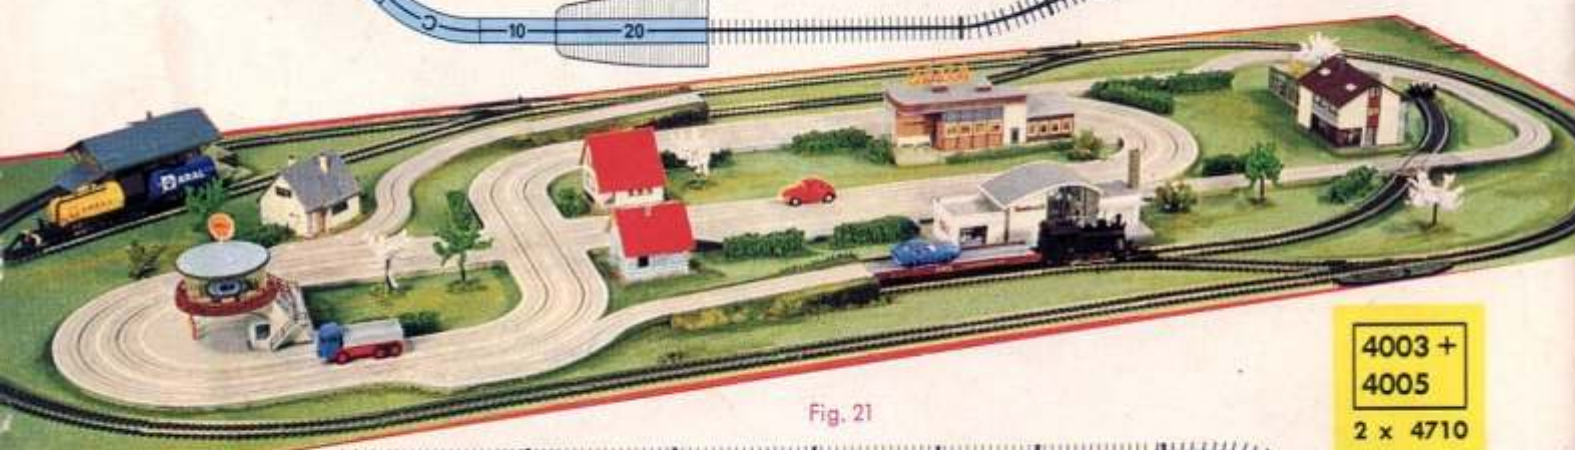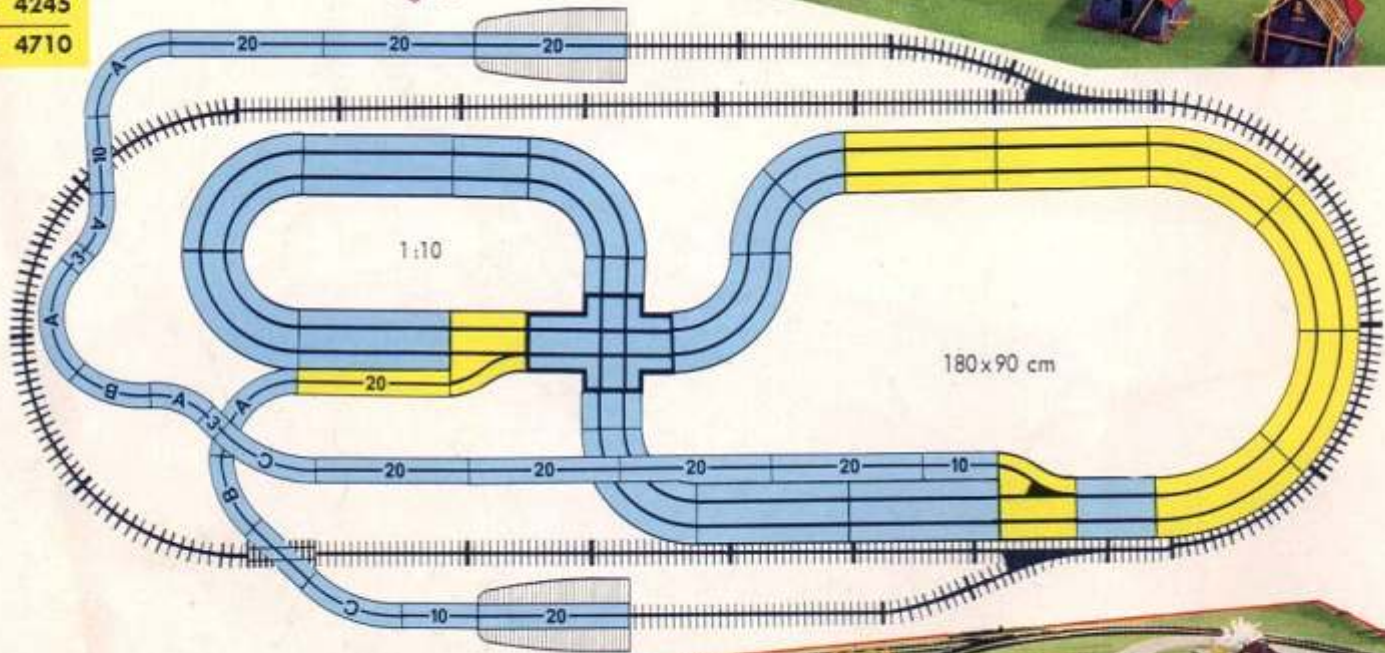

- 4003 +
- 4005
- 2 x 4710

Fig. 21

